

## TT 4969 TEN TEN WALL MOUNTED BRUSH AND POT INSTALLATION GUIDE

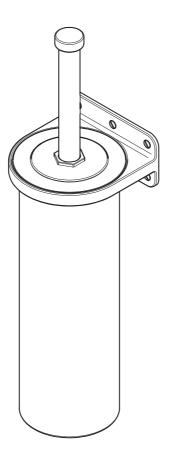

LEFROY BROOKS

### DIMENSIONS

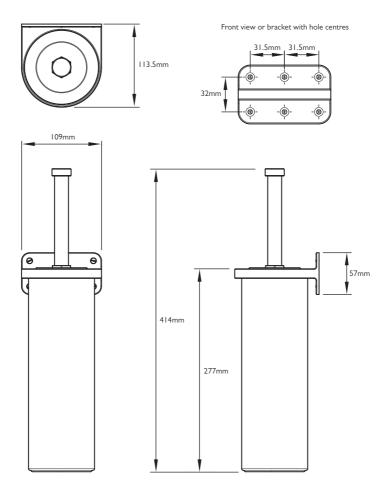


### TOOLS REQUIRED



Powered drill with Ø6mm drill bit






Flat blade screwdriver

Spirit level

#### INSTALLATION

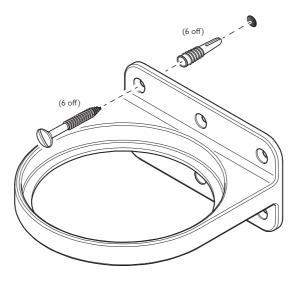

- I Remove the brush and pot from the holder.
- 2 Use a spirit level to ensure the holder is level then mark the hole positions on the mounting surface.
- 3 Drill holes using a Ø6mm drill bit.

- 4 Insert the wall plugs into the holes then secure the holder using the screws supplied. Alternative wall plugs should be used subject to mounting surface construction (not supplied).
- 5 Place the pot and brush into the holder.

20.065.248A / OCTOBER 2016



# customer support +44 (0)1992 708 316

#### LEFROYBROOKS.CO.UK

Whilst every effort is made to ensure the accuracy of these, they are subject to change without notice as part of the company's product development process. The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. LBIP Ltd is a member of ACID (Anti Copying in Design).